

HobbyStar Star-Link PC Link Instructions

Note: Star-Link can only be used with 120A Turbo and 120A/150A Non-Turbo ESC's.

How to use PC to set up or update the firmware :

1. Download Star-Link software from HOBBYSTARLABS.COM and launch application.

Note: There are two status icons on the bottom right of the application; one is for the USB connection status, the other indicates the Electronic Speed Control connection status. They are Orange in color when disconnected and Blue when connected.

2. Plug the USB cable into your PC or laptop computer.

3. Connect the USB Adapter to the USB Cable, USB indicator should turn to Blue.

4. Connect the ESC signal cable to StarLink. Please note the label on the StarLink, there are 3 color bars each marked and indicating how to connect the ESC cable to the adapter.

5. Turn on the ESC.

6. With the ESC connected to the USB Adapter and switched on, the Software Connection status icons should now both be Blue.

7. You are now ready to begin programming.

Please refer to the section (above) for a general overview and field specific help.

Take a moment to review the selectable functions below, and read the specific help text for each to become familiar with them. For more information on specific adjustments within the individual parameters, please refer to the specific ESC instructions. To make configuration changes to a function select the setting you want, and from the drop down menu select your new choice or option. When you are satisfied and finished with programming changes, click the "Apply" button to program the selected settings to the ESC.

Note: Without an understanding of a specific function and its effects, it is not recommended that you make changes to the "default" configuration. The default settings been selected as a direct result of our testing which was used to establish these settings. Changing of the configuration will be at your own risk.

Individual Buttons: Click the button for the data which you would like to modify, and make your selection from the drop down menu.

Apply: Use of this button will send (write) the current selected configuration to the ESC.

Firmware: Use of this button will begin the firmware upgrade process. After downloading firmware updates and saving them to your computer, you can update the firmware on your ESC by following the prompts here.

Please do not unplug your computer or the ESC while the upgrade is in progress or damage to the ESC may result.

Copyright © 2015 HobbyStar